

DV 1170


**Dryer
User Manual**

干衣机
用户手册

Please read this user manual first!

Thank you for preferring a Altus product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Use this user manual for the model indicated on the cover page.

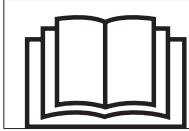

Read the instructions.

Explanation of symbols

Throughout this user manual the following symbols are used:



Important information or useful hints about usage.



Warning for hazardous situations with regard to life and property.



Warning against electric shock.



Warning against hot surfaces.



Warning against fire hazard.



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

1.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.



The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.



Damaged mains cable should be changed notifying the Authorized Service.



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

1.1.2 Product safety



- Superheating of the clothes inside of the dryer can occur if you cancel the programme or in the event of a power failure whilst the dryer is running, this concentration of heat can cause self-combustion and fire so always activate the ventilation programme to cool down or quickly remove all laundry from the dryer in order to hang them up and dissipate the heat.



Points to be taken into consideration for fire hazard:

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.



Below specified laundry or items must not be dried in the dryer due to the fire hazard:

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.
 - Clothing cleaned with industrial chemicals.
- Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer. Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.



Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.



Use softeners and similar products in accordance with the instructions of their manufacturers.



Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.

- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.
- The lint must not be allowed to accumulate around the tumble dryer

1.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Installation Table for Washing Machine and Dryer

Dryer Depth	Washing Machine Depth						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Can be installed					Can be installed	Cannot be installed
60 cm	Can be installed					Cannot be installed	

1.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

1.4 Child safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.



Child-proof lock is on the control panel.
(See Child lock)

- Keep loading door closed even when the dryer is not in use.

1.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.




1.8 Technical Specifications

EN	
Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,5 cm
Depth	54 cm
Capacity (max.)	7 kg**
Net weight (plastic front door usage)	30 kg
Net weight (glass front door usage)	32,5 kg
Voltage	See type label***
Rated power input	
Model code	

* Min. height: Height with adjustable feet are closed.
Max. height: Height with adjustable feet are opened maximum.


** Dry laundry weight before washing.

*** Type label is located behind the loading door.

	Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.
	Figures in this manual are schematic and may not match the product exactly.
	Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.

2 Your Dryer

2.1 Package Contents

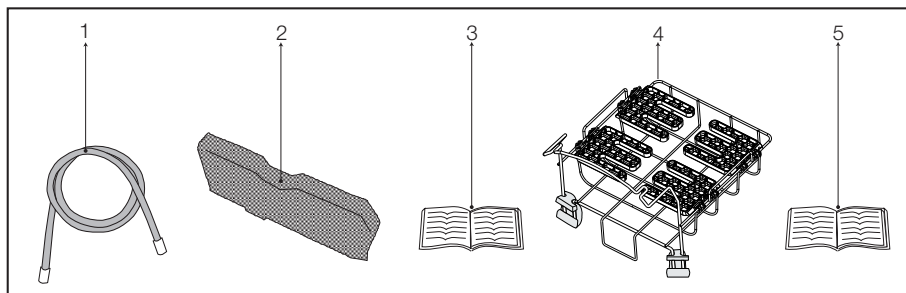




1. Water drain hose *
2. Filter drawer spare sponge*
3. User Manual
4. Drying basket*
5. Drying basket user manual*

*It can be supplied with your machine depending on its model.


3 Installation

Refer to the nearest Authorised Service Agent for installation of your product.

	Preparation of location and electrical installation for the product is under customer's responsibility.
	Installation and electrical connections must be carried out by a qualified personnel.
	Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products will cause risks for your safety.

3.1 Appropriate installation location

- Install the product in an environment which has no risk of freezing and is in a stable and level position.
- Operate your product in a well ventilated, dust-free environment.
- Do not block the air ducts in front of and under the product with materials such as long pile rugs and wooden bands.
- Do not place your product on a long pile rug or on similar surfaces.
- Do not install the product behind a door with a lock, sliding door or a hinged door which can strike the product.
- Once the product is installed, it should stay at the same place where its connections have been made. When installing the product, make sure that the rear wall of it does not touch anywhere (tap, socket, etc.) and also pay attention to install the product at a place where it will stay permanently.

	Do not place the product on top of the power cable.
--	---

- Keep at least 1.5 cm distance to walls of other furniture.

3.2 Under counter installation

- A special part (Part no: 295 970 0100) replacing the top trim must be provided and installed by the Authorised Service Agent in order to use the machine under a counter or in a cupboard. It should never be operated without the top trim.
- Leave at least 3 cm of space between the side and rear walls of the product and the walls of the counter/cupboard when installing your product under a counter or in a cupboard.

3.3 Ventilation hose and connection (for products equipped with an outlet vent)


Ventilation hose allows exhaust air from inside the machine

Vented dryer has 1 air outlet.

Stainless sheet metal or aluminum pipes can be used instead of a hose. The pipe diameter should be minimum 10 cm.





Maximum hose and pipe lengths are given in the table below.





	Hose	Pipe
Maximum length	4 m	5 m
1 elbow 45°	-1.0 m	-0.3 m
1 elbow 90°	-1.8 m	-0.6 m
1 elbow 90° short		-2.7 m
1 wall passage	-2.0 m	-2.0 m



	Each elbow and other passages should be subtracted from the maximum length stated above.
---	--

To connect a ventilation hose;

  1. Connect the air outlet hose to the hose spacer piece by turning it counterclockwise.
2. Make the hose passages as shown below.

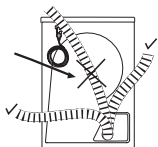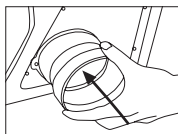
	Exhaust of humid air from the dryer into the room is inconvenient. It may damage the walls and furniture in the room.
	The ventilation hose can be routed outdoors via a window or it can be connected to the air outlet in the bathroom.
	Air outlet hose must be routed directly to the outdoors. There must be a limited number of elbows as not to hinder ventilation.
	To prevent water accumulation in the hose, make sure that it is not folded on the floor.






	The ventilation hose should not be connected to the chimney of a stove or a fireplace.
	Do not operate your product at the same time with heaters such as a coal or gas stove. Airflow may cause the chimney to flare up.

3.4 Adjusting feet

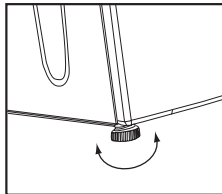In order to ensure that your product operates more silently and vibration-free, it must stand level and balanced on its feet. Front feet of your product can be adjusted. Balance the machine by adjusting the feet.



1. Loosen the feet by hand.
2. Adjust the feet until the product stands level and firmly on the floor.

	Do not use any tools to loosen the adjustable feet, otherwise, they can be damaged.
	Never remove the adjustable feet from their housings.
	You may supply 2 plastic pieces from an Authorized Service with 2951620100 part number. These parts prevent your machine from slipping when the machine locates on wet and slippery surfaces. You may assemble mentioned parts to the front adjustable feet by fitting and pressing them to snap into ground of feet.

3.5 Electrical connection

or specific instructions for electrical connection required during installation (see 1.1.1 Electrical Safety)

3.6 Transportation of the machine

1. Unplug the machine from the mains.
2. Remove the water drain (if any) and chimney connections.
3. Drain water remained in the machine completely before transportation.

3.7 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer

To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service.

The lamp(s) used in this appliance is not suitable for household room illumination.

The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way.

“The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C.”

4 Preparation

4.1 Laundry suitable for drying in the dryer

Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS																					
	Drying Symbols		Suitable for dryer		No Iron		Sensitive / Delicate dry		Do not dry with dryer		Do not dry		Do not dry-clean								
	Drying Settings		At any temperature		At high temperature		At medium temperature		At low temperature		Without heating		Hang to dry		Lay to dry		Hang wet to dry		Lay in shadow to dry		Dry-cleanable
			Iron -		Iron at high temperature		Iron at medium temperature		Iron at low temperature		Do not iron		Iron without steam								
IRON	Dry or Steam			Iron at high temperature	Iron at medium temperature	Iron at low temperature			Do not iron		Iron without steam										
	Maximum temperature		200 °C	150 °C	110 °C																

4.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woolen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

4.3 Preparing laundry for drying

- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.
- Fasten the zippers, hooks and buckles and button sheets.

4.4 Things to be done for energy saving


Following information will help you use the dryer in an ecological and energy-efficient manner.

- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and table clothes dries earlier than thick bathroom towels.
- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add wet laundry while the dryer is in operation

- Clean the lint filter before or after each drying cycle.
- Ventilate the room, where the dryer is located, well during drying.

4.5 Correct load capacity

Follow the instructions in the “Programme selection and consumption table”. Do not load more than the capacity values stated in the table.

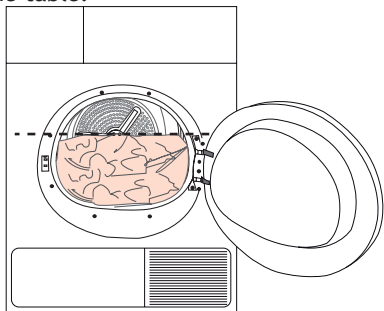

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples:

Laundry	Approximate weights (g)*
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

*Dry laundry weight before washing.

5 Selecting a Program and Operating Your Machine

5.1 Control panel

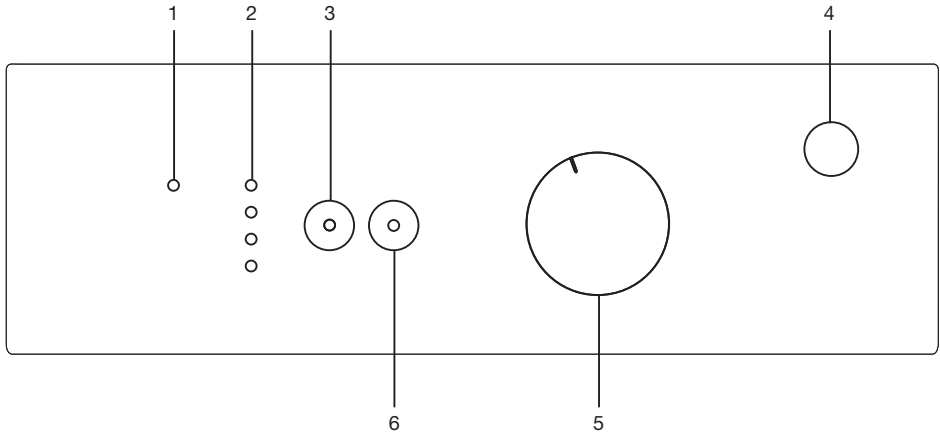

- 1. Filter cleaning warning light**
Warning light turns on when the filter is full.
- 2. Program follow-up indicator**
Used to follow-up the progress of the current programme.
- 3. Low temperature**
Used to dry in low temperatures.
- 4. On/Off button**
Used to turn on and off the machine.

- 5. Programme selection knob**
Used to select a programme.
- 6. Start/Pause/Cancel button**
Used to start, pause or cancel the programme.

5.2 Preparing the machine

1. Plug in your machine.
2. Place the laundry in the machine.
3. Press the “On/Off” button.



Pressing the “On/Off” button does not necessarily mean that the programme has started. Press “Start/Pause/Cancel” button of the machine to start the programme.

5.3 Timer program selection

Decide the appropriate time from the table below which includes drying temperature in degrees. Select the desired time with the timer program selection button.

Extra dry	Dry at high temperature only for cotton laundry. Thick and multi layered laundry (E.g.: towels, linens, jeans) are dried in a way that they do not require ironing before placing in the wardrobe.
Ready to Wear	Normal laundry (E.g.: tablecloths, underwear) are dried in a way that they do not require ironing before placing in the drawers.
Ready to Iron	Normal laundry (E.g., Shirts, dresses) are dried ready to be ironed.



For further program details, see, “Program/Time Selection Table”

5.4 Main programs

•Anti-creasing

A 2-hour anti creasing program to prevent laundry from creasing will be activated if you do not take the laundry out after the program has come to an end. This program rotates the laundry in 60-second intervals to prevent creasing.

•Ventilation

Only ventilation is performed for 10 minutes without blowing hot air. You can air your clothes that have been kept at closed environments for a long time thanks to this program to deodorize unpleasant odors.




•Timer programs

You can select one of the 10 min...30 min...60 min...80 min...100 min...130 min... 150 min...timer programs to achieve the final drying level. Dry the cotton laundry at high temperatures and synthetic and easy-care laundry at low temperatures depending on the type of the laundry.



You must press the “Low temperature” button for synthetics

5.5 Program selection and consumption table

EN					
Program table					
Programs		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloreds					
	Ready to Wear	7	1000	% 60	130
			800	% 70	150
		3.5	1000	% 60	80-100
			800	% 70	100-130
	Ready to Iron	7	1000	% 60	100
			800	% 70	100-130
		3.5	1000	% 60	60-80
			800	% 70	80
Synthetics					
	Ready to Wear	3.5	800	% 40	60
			600	% 50	60-80
		1.75	800	% 40	30-60
			600	% 50	30-60
Energy consumption values					
Programs		Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cottons linen Ready to wear*		7	1000	% 60	3,95
Cottons Ready to iron		7	1000	% 60	3,10
Synthetics Ready to wear		3.5	800	% 40	1,30

5.6 Auxiliary function

Low temperature

This function allows for drying at lower temperatures and therefore saves energy. Warning LED will light up when you select the function.



You must use this function when you dry your synthetic or delicate laundry.

5.7 Warning indicators



Warning indicators may differ according to the model of your machine.

Filter cleaning

A warning LED will light up to remind filter cleaning after the program finishes.



If the filter cleaning warning LED lights up continuously, please refer to, "Solution suggestions for problems".

5.8 Starting the Program

1. Press "Start/Pause/Cancel" button to start the program.
2. "Start/Pause/Cancel" button will light up to indicate that the program has started.

Timer follow-up indicator

One of the lamps is on as far as program runs and shows the approximate remaining time.



LEDs on the timer follow-up indicator will also flash when the child-proof lock is activated.



If more than one LED light up or flash concurrently, it means there is malfunctioning or a failure (please see, Solution suggestions for problems).

5.9 Changing the program after the program has started

You can use this feature to dry your laundry in a different program after your machine has started to run.

For example;

Press and hold the "Start/Pause/Cancel" button for about 3 seconds to select "80" minutes program instead of "60" minutes program.

Select the "80" minutes program by rotating the program knob.

Press "Start/Pause/Cancel" button to start the program.



The program which is selected first will go on even if the program selection button is moved and another program mode is selected while the machine is operating. You must cancel the ongoing program in order to change the drying program. (See, Ending the program through canceling)

5.10 Adding/removing laundry in standby mode

In order to add or take out laundry after the start-up of the program;

1. Press the "Start/Pause/Cancel" button to switch the machine to "Pause" mode. Drying process will stop.
2. Open the door at Pause position and close it again after adding or taking out laundry.
3. Press "Start/Pause/Cancel" button to start the program.



Any laundry added after the drying process was started may cause the already dried clothes in the machine intermingle with wet clothes and the result will be wet laundry after the drying process is over.



Laundry may be added or taken out as much as desired during a drying process, but as this process will interrupt drying continuously, it will extend the program duration and increase energy consumption. Therefore, it is recommended to add laundry before the drying program is started.

- Press “Start/Pause/Cancel” button for about a duration of 3 seconds. The “Filter cleaning” and “Water tank” warning LEDs as well as the “0” warning LED on the program follow-up indicator will light up at the end of this period for reminding purposes.



As the inside of the machine will be excessively hot when you cancel the program while the machine is running, activate the ventilation program to cool it down.




If the machine is stopped during any drying program, and if the position of the program selection knob is changed, an audio signal will be heard (if the “Cancel audio warning” function is not selected).

5.11 Child-proof lock

There is a childproof lock to prevent any program interruption due to the pressing of keys while the program is on. The loading door and all keys except the “On/Off” key on the panel are deactivated when the child-proof lock is active.

In order to activate the childproof lock, press on the “Start/Pause/Cancel” and “Low temperature” buttons simultaneously for 3 seconds.

To start a new program after the program is over or to interrupt the program, the childproof lock should be deactivated. To deactivate the childproof lock, press the same buttons for 3 sec.

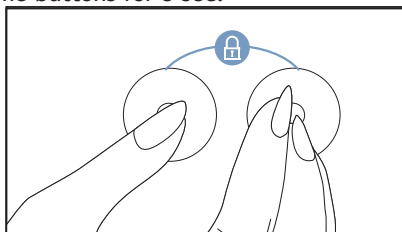

The machine will not start even if the “Start/Pause/Cancel” button is pressed, unless the program selection knob is returned to the initial program. The paused program must be cancelled in order to change the drying program.

5.13 End of program

The “Filter cleaning” and “Water tank” warning LEDs as well as the “0” warning LED on the program follow-up indicator will light up at the end of the program. The door can be opened and the machine becomes ready for a second cycle.

Press the “On/Off” button to shut down the machine.



One of the LEDs on the program follow-up indicator starts flashing when the child-proof lock is activated.



Child-proof lock is deactivated when the machine is restarted by pressing the On/Off button.



A 2-hour anti creasing program to prevent laundry from creasing will be activated if you do not take the laundry out after the program has come to an end.



Clean the filter after each drying (please see, Filter cleaning).



Drain the water tank after each drying (please see, Water tank)

5.12 Ending the program through canceling

The program which is selected first will keep on going even if the position of the program selection button is changed. A new program can be selected and started after “Program cancel” is activated in order to change the drying program.

To cancel any selected program;

6 Maintenance and cleaning

6.1 Lint filter

Lint and fibres released from the laundry to the air during the drying cycle are collected in the “Lint Filter”.



Such fibre and lint are generally formed during wearing and washing.



Always clean the filter after each drying process.



You can clean the filter and filter area by vacuum cleaner.

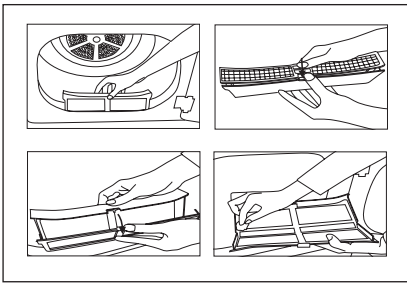


Figure 1

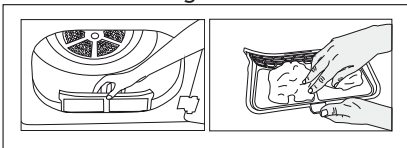


Figure 2

To clean the filter:

1. Take out the cover.
2. a) If the product's lint filter can be opened as shown in Figure 1, remove the filter by pulling it up and open the filter.
b) If the product's lint filter is as shown in Figure 2, remove the filter by pulling it up.
3. Clean lint, fibre, and cotton raveling on the filter and in the filter housing by hand or with a soft piece of cloth.
4. Close the filter and place it back into its seat.



Clogging may arise on the filter surface after using your machine for some time; if this occurs, wash the filter with water and dry it before using again.

7 Solution suggestions for problems

Problem	Cause	Explanation / Suggestion
Drying process takes too much time.	Cover filter and filter drawer might have not been cleaned.	* Meshes of the filter may be clogged. Wash with water.
Laundry come out wet at the end of drying.	* Cover filter and filter drawer might have not been cleaned. * Excessive laundry might have been loaded in.	* Meshes of the filter may be clogged. Wash with water. * Do not overload the machine.
Machine does not switch on or the programme does not start. Machine is not activated when set.	* It might have not been plugged in. * The loading door may be ajar. * Programme might have not been set or the «Start/Pause/Cancel» button might have not been pressed. * «Childproof lock» might have been activated.	* Make sure that the machine is plugged in. * Make sure that the loading door is properly closed. * Make sure that the programme has been set and it is not in “Pause” mode. * Deactivate the childproof lock.
Programme has been interrupted without any cause.	* The loading door may be ajar. * Electricity may be cut off.	* Make sure that the loading door is properly closed. * Press «Start/Pause/Cancel» button to start the programme.
Laundry has shrunk, become felted or deteriorated.	* A programme suitable for the laundry type might have not been used.	* Dry only the laundry which is suitable for drying in your machine after checking the labels on your clothes. * Select a programme with suitable low temperature for the laundry type to dry your clothes.
Drum lightning does not come on. (for models equipped with a lamp)	* The machine might have not been started by using the On/Off button. * Bulb may have blown.	* Make sure that the machine is On. * Call the authorized service to replace the bulb.
“Final / Anti-creasing” LED flashes.	* The 2-hour anti creasing programme to prevent laundry from creasing might have been activated.	* Turn off the machine and take out the laundry.
“Final / Anti-creasing” LED is on.	* Program has come to an end.	* Turn off the machine and take out the laundry.
The “Drying” LED flashes.	* A heat sensor failure has occurred. Machine ends the programme without heating.	* Turn off the machine and take out the laundry. Call your authorized service.
“Filter cleaning” LED flashes.	* Filter might have not been cleaned.	* Clean the cover filter.



Call an authorized service agent if the problem persists.

请首先阅读本用户手册！

亲爱的顾客，







感谢您选购 Altus 产品。我们的产品具有高品质，且采用先进的技术生产，希望您能从中获取最大的效益。使用本产品前，建议您仔细阅读本手册和附带的其它文件，并妥善保管，以备日后参考。如果将本产品转让他人，请一并移交本手册。请注意用户手册中载明的所有详情和警告，并遵循其中的指示。

请注意，此用户手册也适用于其它多种型号。手册中将标出不同型号之间的差异。



符号解释

本用户手册中，使用了下列符号：

	与使用有关的重要信息或有用的提示。
	有关生命和财产之危险情况的警告。
	触电警告。
	高温表面警告。
	火灾危险警告。
	本产品的包装材料使用我国环境立法规定的可回收材料制成。

包装材料不得随生活垃圾或其它垃圾一起处置，而应送至当地机构指定的专门的回收点进行处置。

1 重要的安全和环境说明

本节包含安全须知，将帮助您免受个人伤害或财产损失。若违反这些安全须知，将导致保修条款失效。

1.1 一般安全

- 如果有人负责监管和提供有关安全使用烘干机及相关危险的指导，8岁及以上的儿童和体力、感知力和智力下降以及技术不熟练或无经验之人员可以使用本设备。儿童不得摆弄该产品。不得由儿童执行清洁和维护工作，除非有人在旁监督。
- 如果无人一直看管，3岁以下的儿童应远离本设备。
- 不得拆除可调支腿。地毯、木板和胶带等材料不得减少干衣机与地面的间隙。这可能导致干衣机出现问题。
- 请务必由经授权的服务中心，实施安装和修理步骤。对于由未经授权的人员实施的步骤导致的损坏，制造商不承担任何责任。
- 清洁时，切勿在干衣机上喷水或倒水！否则，会有触电的危险！

1.1.1 用电安全



安装期间，实施电气连接时，应遵循用电安全说明。



本装置不得通过外部开关装置供电，例如，定时器，或连接到一般由市电开启和关闭的线路。

- 将干衣机连接到接地插座上，插座应当由符合型号标签中指定之数值的保险丝保护。接地安装应当由具备资历的电工实施。如果没有根据当地规定，在接地的情况下使用干衣机，若导致任何损坏，我公司不承担任何责任。
- 电压和允许的保险丝保护在型号标牌上指定。
- 型号标签上指定的电压必须等于电源电压。
- 不使用时，请拔下干衣机接头。
- 安装、维护、清洁和维修期间，拔下干衣机的电源插头。
- 切勿用潮湿的双手接触插头！拔下插头时，切勿拉拔电缆，而应直接握住插头。
- 干衣机连接电源时，不得使用加长电源线、多插头或适配器，以减少起火和触电的危险。
- 安装后，电源线插头必须在触手可及的范围内。



损坏的电源线必须通知经授权的服务中心进行更换。



如果干衣机发生故障，在由经授权的服务代理维修妥当后，方可操作！否则，会有触电的危险！

1.1.2 产品安全



为避免火灾危险应考虑的要害：

鉴于有起火的危险，请勿在干衣机烘干以下指定的衣物或物品。

未清洗的衣物

受到机油、丙酮、酒精、燃油、煤油、去污剂、松节油、石蜡或石蜡去除剂污染的衣物必须使用足量的洗衣剂，在热水中清洗，而后方可使用干衣机烘干。

因此，尤其是带有上述污迹的衣物必须彻底清洗，方法是，使用足量的洗衣剂，在高温下清洗。



鉴于有起火的危险，请勿烘干以下指定的衣物或物品：

带有橡胶泡沫（乳胶泡沫）支撑的衣物或枕头、淋浴帽、防水织物，带有橡胶加强件和橡胶泡沫垫的材料。

使用工业化学品清洁的衣物。

诸如打火机、火柴、硬币，金属配件，针等物品可能损坏滚筒或导致功能问题。因此，应仔细检查需要投入干衣机的所有衣物。

程序完成后，方可止动干衣机。如果必须中途止动干衣机，应快速取出所有衣物，并摊开，确保及时散热。



洗涤不充分的衣物可能自燃，甚至在烘干结束后亦可能自燃。

- 您必须提供充分的通风，防止使用其它类型燃料的设备排出的气体因逆火效应在房间内聚积。



不得在干衣机内烘干带有金属加强件的内衣。烘干过程中，如果金属加强件松脱或折断，干衣机可能受损。



根据制造商的说明，使用柔顺剂和类似制品。



每次装入前后，应清洁棉绒过滤器。若未安装棉绒过滤器，请勿操作干衣机。

- 不得尝试自行维修干衣机。即使您了解或有能力执行要求的步骤，仍不得在产品上执行任何维修或更换步骤，除非此类步骤在操作说明书或出版的服务手册上明确建议。否则，可能威胁您或他人的生命安全。
- 在安装干衣机的位置，不得有可锁、滑动或铰接门，妨碍打开装填门。
- 在适合家庭使用的位置安装干衣机。（浴室、封闭阳台，车库等。）
- 确保宠物不会进入干衣机。操作前，检查干衣机内部。
- 干衣机打开时，请勿斜倚在装填门，其可能翻倒。
- 切勿在转筒式干衣机周围聚积棉绒。

1.2 安装在洗衣机上方

- 在洗衣机上方安装干衣机时，应当在两台设备之间使用固定装置。必须由经授权的服务代理实施安装。
- 满载时，上下叠放的洗衣机和烘干机总重量大约 180 公斤。将产品放在能够承载设备重量的牢固地面上！



洗衣机不能安装在干衣机上方。在洗衣机上方安装期间，注意上述警告。

洗衣机和干衣机安装表

干衣机深度	洗衣机深度						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	可以安装					可以安装	不能安装
60 cm	可以安装					不能安装	

1.3 既定用途

- 干衣机设计供家庭使用。其不适合商业用途，且不得用于除既定用途以外的场合。
- 干衣机仅可以用于烘干带有相应标签的衣物。
- 对于使用或运输错误导致的损害，制造商不承担任何责任。
- 干衣机的使用寿命为 10 年。在此期间，将提供原装备件，以确保干衣机正常工作。



儿童锁位于控制面板上。（参见“儿童锁”。）

- 即使不使用干衣机时，装填门仍应保持密闭。

1.5 符合 WEEE 规定和废旧产品处置

本产品符合 EU WEEE 指令 (2012/19/EU)。本产品带有废旧电器和电子设备 (WEEE) 分类符号。

本产品采用可以重复使用和适合回收的优质零件和材料制成。因此，在本产品使用寿命结束时，请勿作为日常生活垃圾或其它废物进行处置。而应将本产品送至电器和电子设备回收中心进行处置。请咨询当地机构，了解最近的回收中心。

1.6 符合 RoHS 指令:

您所购买的产品符合 EU RoHS 指令 (2011/65/EU)。本产品不包含指令中规定的有害和禁用物质。

1.7 包装信息

本产品的包装材料使用根据我国环境法规可回收的材料制成。请勿将包装材料与生活垃圾或其它垃圾一起处置。应将包装材料运送至当地机构指定的包装材料回收点。




1.8 技术规格

ZH	
高度（可调）	84,6 cm / 86,6 cm*
宽度	59,5 cm
深度	54 cm
容量（最大）	7 kg**
重量（净重）	30 kg
净重（使用玻璃前门）	32,5 kg
额定功率输入	参见型号标签***
型号代码	
型号标签位于装填门后面。	

* 最小高度：可调支腿闭合时的高度。
最大高度：可调支腿最大限度打开时的高度。


** 洗涤前干衣物重量。

*** 型号标签位于装填门后面。

	为提高质量，干衣机的技术规格可能变更，恕不另行通知。
	本手册中的图片均为示意图，可能与您的产品有所不同。
	干衣机标签或随机提供的其它出版文件中给出的数值均在实验室中按照相关标准获得。根据产品运行条件和环境状况的不同，这些数值可能有所不同。

2 干衣机

2.1 包装内容物

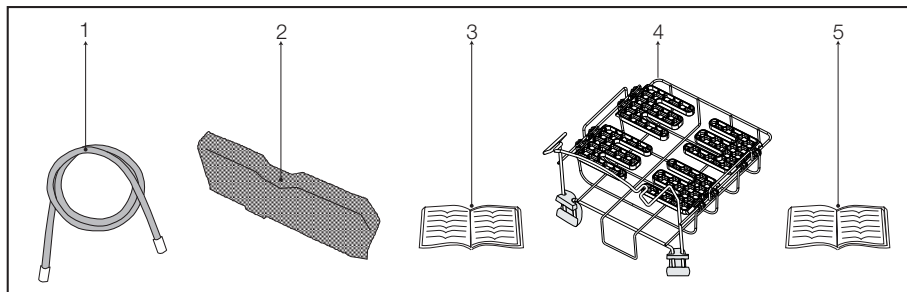




1. 排水软管 *
2. 过滤器抽屉备用海绵*
3. 用户手册
4. 烘干篮*
5. 烘干篮用户手册*

*根据型号不同，部分产品可能提供。


3 安装

有关本产品的安装，请就近咨询授权服务代理。

	产品安装位置的准备工作和电气安装由客户负责。
	安装和电气连接必须由具有资历的人员实施。
	安装前，目测检查产品上是否有任何缺陷。如果有，请勿安装。受损的产品会威胁您的安全。

3.1 合适的安装位置

- 在没有冻结危险的环境安装本产品，并应安装在稳固、水平的位置。
- 在通风良好、无尘的环境中操作本产品。
- 请勿使用长绒毛地毯和木条等材料堵塞产品正面和底部的通风管。
- 请勿将本产品放置在长绒毛地毯或者类似表面上。
- 请勿在带锁的门、推拉门或者可能触碰到本产品的铰链门后面安装本产品
- 一旦安装了本产品，其应当与接头在同一位置。安装本产品时，确保其后壁不会触碰到任何地方那个（水龙头、插座，等），也注意在一个永久性的位置安装本产品。

	请勿将本产品放在电源线上。
--	---------------

- 距离其它家具的四壁至少 1.5 cm。

3.2 在台面下安装

- 必须提供一个特殊零件（零件号：295 970 0100）取代顶部饰条，且必须由授权服务代理安装，以便在台面或者橱柜下面使用本设备。在没有顶部饰条时，切勿操作。
- 在台面或者橱柜下面安装本产品时，在其侧壁和后壁与台面/橱柜四壁之间至少保持 3 cm 的空间。

3.3 通风软管和连接（用于配备通风口的产品）

通风软管允许从设备内部排出空气带有通风的烘干机具有 1 个排气口。可以使用不锈钢金属或者铝管代替软管。管直径应当至少 10 cm。





下表给出最大的软管和管道长度。



	软管	管道
最大长度	4 m	5 m
1 个 45°弯管	-1.0 m	-0.3 m
1 个 90°弯管	-1.8 m	-0.6 m
1 个 90°短弯管		-2.7 m
1 个墙式通道	-2.0 m	-2.0 m



	应当从上述最大长度减去每个弯管和其它通道。
---	-----------------------

连接一根通风软管：

1. 将排气软管连接至软管间隔件，方法是，逆时针转动之。
2. 如下图所示，制作软管通道

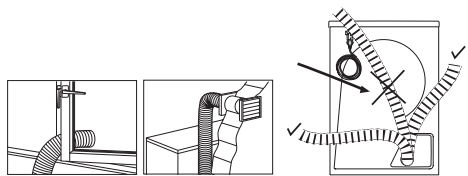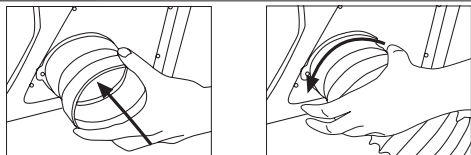	将潮湿的空气从烘干机排放到房间中不合适。其可能损坏墙壁和房间中的家具。
	通风软管可以通过窗户布置到户外，或者连接到浴室的排气口。
	通风软管必须直接连接至户外。为了避免妨碍通风，弯管的数量必须加以限制。
	为了防止软管中积聚水，确保其没有在地面上折叠。




	通风软管不应当连接至炉具或者壁炉的烟道。
	请勿与煤炉或煤气炉等加热器同时操作本产品。气流可能导致烟道突然发出火焰。




3.4 连接下水道（配备冷凝器的产品）：

如调节支腿

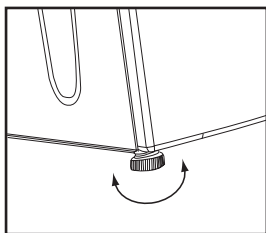为了确保您的产品更安静地工作和没有振动，其必须在支腿上保持水平和平衡。产品的前部支腿可以调整。通过调节支腿，使机器保持平衡。



1. 用手松开支腿。
2. 调整支腿，直至产品在地面上保持水平和稳固。

	松开调节支腿时，请勿使用任何工具，否则，支腿可能受损。
	切勿将支腿从外壳上拆卸下来。
	经授权的服务中心可能为您提供 2 个零件号码为 2951620100 的塑料件。机器位于湿滑的表面时，这些零件可以防止机器滑动。您可以将上述零件组装到前部可调支腿，安装和按压，扣入到支腿底部。

3.5 电气连接

安装期间要求的特定的电气连接须知 (参见 1.1.1 用电安全)

3.6 设备运输

1. 从电源上拔下设备插头。
2. 拆下下水道（如果有）和烟道接头。
3. 运输前，将设备内残留的水彻底排空。

3.7 更换照明灯泡

如果干衣机使用照明灯泡

若要更换干衣机照明所用的灯泡/LED，请致电经授权的服务代理。

此设备使用的灯泡不适用于家庭房间照明。灯泡的既定用途是帮助用户舒适地在转筒式干衣机内投入衣物。

本用具中使用的灯泡必须耐受极端物理条件，如振动或50°C以上的温度。

4 准备

4.1 适合在干衣机烘干的衣物

始终遵循衣物标签上的说明。只能烘干标签中指明适合在干衣机烘干的衣物，并确保选择适当的程序。

衣物烘干符号																					
	烘干符号		适用烘干机		不可熨烫		敏感 / 轻柔烘干		不适用干衣机		请勿烘干		请勿干洗								
	烘干设置		在任何温度		在高温		在中温		在低温		不加热		悬挂晾干		平摊晾干		悬挂滴干		阴凉处平摊晾干		可以干洗
			悬挂晾干		平摊晾干		悬挂滴干		阴凉处平摊晾干		可以干洗										
	熨烫 -					高温熨烫		中温熨烫		低温熨烫		请勿熨烫		不用蒸汽熨烫							
熨烫	烘干或蒸汽				高温熨烫	中温熨烫	低温熨烫				请勿熨烫	不用蒸汽熨烫									
	最高温度				200 °C	150 °C	110 °C				请勿熨烫	不用蒸汽熨烫									

4.2 不适合在干衣机烘干的衣物

	精致的绣花织物、毛纺、丝绸衣物，精致和高档织物，不透气的衣物和薄纱窗帘不适合机器烘干。
--	---

4.3 准备需要烘干的衣物

- 清洗后，衣物可能缠绕在一起。投入干衣机前，分开衣物。
- 烘干带有金属附件（例如拉链）的衣物时，把里面翻到外面。
- 系紧拉链、挂钩、带扣和钮扣。


4.4 节能措施

下列信息将有助于您以环保和高能源效率的方式使用干衣机。

- 洗衣时，尽可能在最高的转速甩干。这样，可以缩短烘干时间和减少能耗。
- 根据衣物类型和厚度进行分类。同时烘干相同类型的衣物。例如，厨房用的薄毛巾和桌布烘干时间要比浴室用的厚浴巾少。
- 选择程序时，遵循用户手册中的说明。
- 烘干期间，除非必要，否则，请勿打开装填门。如果必须打开装填门，请勿长时间敞开。
- 干衣机工作期间，请勿添加湿衣物。
- 每次烘干前后，应清洁棉绒过滤器。
- 烘干期间，干衣机所在房间应充分通风。

4.5 正确的装载容量

遵循“程序和能耗表”中的说明。装载的衣物请勿超出表中指定的容量值。

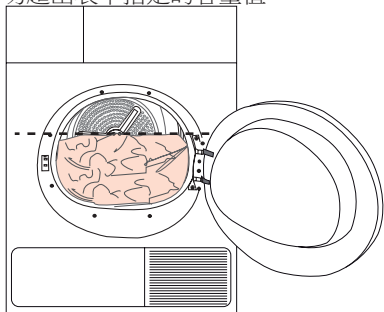

建议干衣机装入的衣物不得超出图中指定的水平。干衣机过载时，烘干性能将下降。此外，干衣机和衣物可能受损。


下列重量仅为示例。

衣物	大致重量 (克)*
纯棉被罩 (双人)	1500
纯棉被罩 (单人)	1000
床单 (双人)	500
床单 (单人)	350
大台布	700
小台布	250
茶布	100
浴巾	700
手巾	350
长裤	150
纯棉衬衫	300
衬衫	250
女棉服	500
连衣裙	350
牛仔裤	700
手帕 (10块)	100
T 恤	125

*洗涤前干衣物重量。

5 选择程序，并启动机器

5.1 控制面板

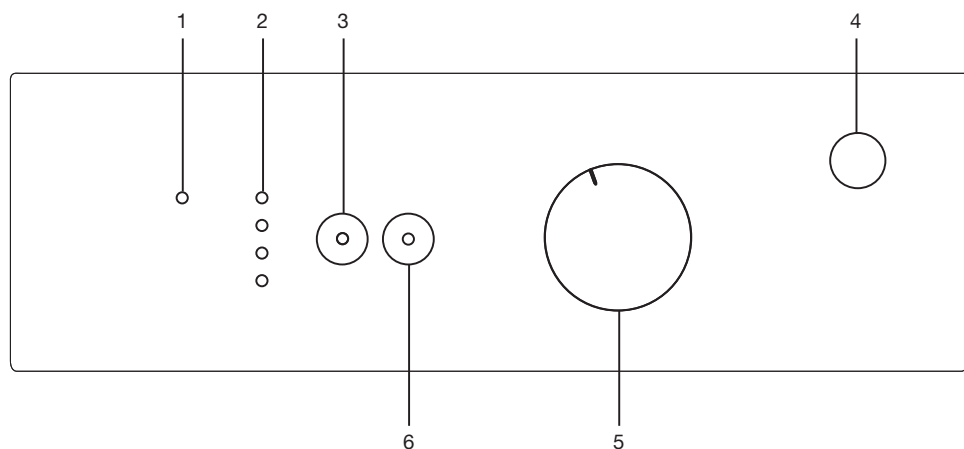

1. 过滤器清洁警告灯

过滤器已满时，警告灯亮起。

2. 程序追踪指示灯

用于追踪当前程序的进度。

3. 低温

用于在低温下烘干

4. “开/关”按钮

用于接通和关闭电源。

5. 程序选择旋钮

用于选择一个程序。

6. “启动/暂停/取消”按钮

用于启动、暂停或取消程序。

5.2 准备工作

1. 洗衣机接通电源。
2. 将衣物投入洗衣机内。
3. 按“开/关”按钮。



按“开/关”按钮不一定意味着程序已经启动。按“启动/暂停/取消”按钮启动程序。

5.3 选择烘干时间

按照下表确定适当的烘干时间及温度。用程序选择旋钮选择需要的烘干时间。

特干	高温烘干，仅限于棉质衣物。适用于厚的或多层纺织品（如毛巾，亚麻制品，牛仔布等）。在收藏起来之前无需熨烫。
适合穿着	降温烘干（如桌布，内衣等）。在收藏起来之前无需熨烫。
适于熨烫	降温烘干（如衬衫，裙子等）。烘干后需熨烫。



参阅程序/时间选择表以获得进一步信息。

5.4 主程序

• 防褶皱

烘干后若没有立即取出衣物，机器将启动一个2小时的防褶皱程序。这个程序每60秒旋转一次衣物，以防止衣物起皱。

• 换气

换气程序能保持十分钟的冷风。您能借此出去衣物由于储藏在密闭环境中时间过长而产生的异味。

• 时间程序

您能选择10分钟…30分钟…60分钟…80分钟…100分钟…130分钟…150分钟不等的程序来设定最终的烘干程度。用高温烘干棉质衣物，而对于人造合成材料纺织品以及易清洗的衣物使用较低的温度。



对于人造合成材料的纺织品，您必须选择弱烘干。

5.5 程序及耗时选择表

ZH					
程序表					
程序		容量(kg)	脱水机转速(rpm)	脱水后平均湿度	所需烘干时间(分钟)
白色/彩色棉织物					
☐☐	准备穿着	7	1000	% 60	130
			800	% 70	150
		3.5	1000	% 60	80-100
			800	% 70	100-130
☐☐	准备熨烫	7	1000	% 60	100
			800	% 70	100-130
		3.5	1000	% 60	60-80
			800	% 70	80
人造合成材料纺织品					
☐☐	准备穿着	3.5	800	% 40	60
			600	% 50	60-80
		1.75	800	% 40	30-60
			600	% 50	30-60
耗电量					
程序		容量(kg)	脱水机转速(rpm)	脱水后平均湿度	耗电量(kwh)
棉质、亚麻材料，准备穿着*		7	1000	% 60	3,95
棉质材料，准备熨烫		7	1000	% 60	3,10
准备穿的合成纤维衣物		3.5	800	% 40	1,30

5.6 辅助功能

低温

这项功能能够提供在较低温度下的烘干以节省能源
选择此项功能时弱烘干指示灯会亮起。



烘干人造合成材料纺织品或娇嫩衣物时必须选择此功能。

5.7 警告指示



警告指示可能会因机器型号不同而不同。

清洁绒毛过滤器

程序结束后绒毛过滤器指示灯将亮起，以提示应该清洁绒毛过滤器。



若此指示灯持续发亮，请参阅“问题解决帮助”解决问题。

水槽

程序结束后或水槽内水满时，水槽指示灯将会亮起。如果在程序运行时此灯亮起，那么机器将停止运转。要重启机器，请将水槽内的水倒干，随后按开始/暂停/停止键以重启程序。此时灯会熄灭，机器将继续运转。

5.8 开始程序

- 1.按开始/暂停/停止键以启动烘干程序。
- 2.程序开始后，开始/暂停/停止键将亮起。

时间指示器

程序运行时，将有一个灯亮起以表示大概的剩余时间。



儿童锁锁上时，此灯将闪烁。



如果多个时间指示灯持续亮起或闪烁，则表示有错误或故障出现（请参考“问题解决帮助”）。

5.9 程序启动后改变程序

使用此功能，可使您在程序启动后选择另一种烘干程序。

例如，

要将60分钟程序改为80分钟程序，首先长按开始/暂停/停止键3秒。

用程序选择旋钮选择80分钟程序。

按开始/暂停/停止键开始程序。



在机器运转时，最初选择的那个程序将继续运转——即使在此过程中旋转了程序选择旋钮选择另一烘干程序。您必须取消正在进行的烘干过程才能更改程序。（请参阅，通过取消结束程序）

5.10 待命状态下添加或减少衣物

为了在程序启动后添加或减少衣物

- 1.按开始/暂停/停止键使机器暂停。烘干过程将停止。
- 2.暂停状态下打开机门，添加或取出衣物后再关紧机门。
- 3.按开始/暂停/停止开始程序。



烘干过程中添加任何衣物都可能导致已烘干的衣物与湿衣物混合，并且导致程序结束时仍然未烘干。




可按需要添加或减少衣物。但是这样会打断程序，并导致烘干过程延长以及额外的能耗。因此，建议在程序开始前添加衣物。

5.11 儿童防锁

程序开始后，可以设置儿童防锁以防止由于无意触及按键而导致的程序中断。此时，控制面板上除开/关外的所有按键以及干衣机门锁都将失效。同时长按开始/暂停/停止键和弱烘干键3秒，便能设置儿童防锁。

在程序结束或中断后若要重新开始新程序，必须先解除儿童防锁。按住同样的按键3秒便能解除此状态。

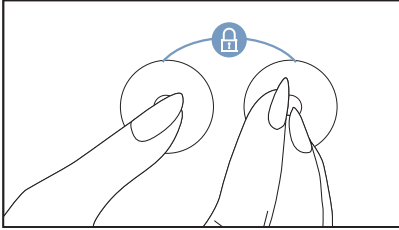

程序指示灯中的一个会在儿童防锁状态下不停闪烁。



在通过按下开/关按钮重新启动烘干机时，儿童锁停用。

5.13 程序结束

程序结束时，绒毛过滤器指示灯、水槽指示灯以及程序指示灯中的“0”分钟指示灯将亮起。机门可以被打开，机器也已准备好进行下一轮烘干。

按开关键关闭机器。



烘干后若没有立即取出衣物，机器将启动一个2小时的防褶皱程序。



每次烘干后都需要清洗绒毛过滤器。（请参阅，清洗绒毛过滤器）



每次烘干后都需要清空水槽。（请参阅，水槽）

5.12 通过取消结束程序

首先被选择的程序会一直运转即使程序选择钮被转动。在旧序取消后可以选择一个新的以开始新的烘干过程。

取消已选择的程序过程如下

- 长按开始/暂停/停止键3秒。此时，过滤指示灯、水槽指示灯以及程序指示灯中的“0”分钟指示灯将亮起



取消程序后机器内部温度非常高，因此需要打开通风程序以冷却温度。

6 维护和清洁

6.1 过滤器盖

衣物在烘干循环释放到空气中的绒毛和纤维收集在过滤器盖中。



此类纤维和绒毛一般在穿着和清洗的过程中形成。



每次完成烘干过程后，务必清洁过滤器。



您可以使用真空吸尘器清洁过滤器和过滤器区域。

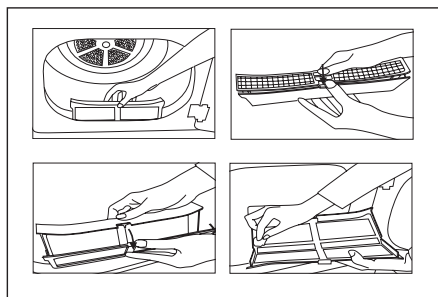


图 1

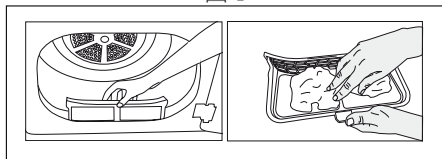


图 2

若要清洁过滤器：

1. 取出盖子。
- 2.a 如果产品的封盖过滤器可以如图 1 所示打开，向上拉过滤器，将其取出，而后打开过滤器。
- 2.b 如果产品的封盖过滤器如图 2 所示，向上拉过滤器，将其拆卸下来。
3. 用手或柔软的抹布，清洁过滤器上的绒毛，纤维和棉花散纱。
4. 关闭过滤器，并将其放回到底座上。



烘干机使用了一段时间后，过滤器表面可能堵塞；如果发生这种情况，再次使用前，用水清洗过滤器，并烘干之。

7 问题解决建议

问题	原因	解释/建议
烘干过程时间过长。	过滤器盖和过滤器拔取器可能尚未清洁。	* 过滤器的网眼可能堵塞。用水清洗。
烘干结束后，出来的衣物仍是湿的。	* 过滤器盖和过滤器拔取器可能尚未清洁。 * 可能放入了过多的衣物。	* 过滤器的网眼可能堵塞。用水清洗。 * 请勿放入过多的衣物。
烘干机无法接通电源，或者程序不启动。设定时，烘干机不激活。	* 可能是没有插上电源。 * 装填门可能未关严。 * 可能尚未设置程序，或者尚未按下“启动/暂停/取消”按钮。 * “儿童锁”可能激活。	* 确保烘干机插上电源。 * 确保装填门适当关闭。 * 确保设置了程序，且其没有处于“暂停”模式。 * 解除儿童锁。
程序意外中断。	* 装填门可能未关严。 * 电源可能被切断了。	* 确保装填门适当关闭。 * 按下“启动/暂停/取消”按钮启动程序。
衣物缩水、起毛，或者品质下降。	* 可能是由于没有选择适合衣物类型的程序。	* 检查衣物上的标签之后，只烘干适合的衣物。 * 针对衣物类型，选择合适的低温程序进行烘干。
滚筒灯不亮起。 (对于配备灯的类型)	* 尚未使用开/关按钮启动烘干机。 * 灯泡可能熔断。	* 确保烘干机接通电源。 * 致电授权维修代理更换灯泡。
“最终/防皱”LED 闪烁。	* 可能激活了 2 小时的防皱程序，防止衣物产生褶皱。	* 关闭烘干机，并取出衣物。
“最终/防皱”LED 亮起。	* 程序已经结束。	* 关闭烘干机，并取出衣物。
“正在烘干”LED 闪烁。	* 加热传感器发生故障。烘干机在没有加热的情况下，结束程序。	* 关闭烘干机，并取出衣物。致电授权维修代理。
“过滤器清洁”LED 闪烁。	* 过滤器可能尚未清洁。	* 清洁过滤器盖。



如果问题仍然存在，请致电授权维修代理。

